



Adventurer LP

3303 West Washington Avenue

Yakima, Washington 98903

Phone: 509-895-7064 Fax: 509-895-7068

Email: amlrv@amlrv.com Website: www.amlrv.com

SCHWINTEK SLIDE OUT ELECTRONIC CONTROLLER SETUP

Step 1:

- Locate slide out wall switch for slide out room being worked on.
- Locate slide out controller, usually located in the basement storage compartment.



Step 2:

Homing the slide out control box for the first time:

- Using the wall switch, press the “IN” button.
- Quickly verify that both motors are moving in the same direction, if not stop immediately and remedy problem.
- Allow the room to power all of the way in and continue pressing the “IN” button until both sides have completely stopped and **the motors turn off by themselves.**
- Let off the “IN” wall switch and check the red and green LED lights on the circuit board and confirm that both are on (they will both turn off automatically after one minute).
- If only one of the LED light is on then go back to the wall switch, press the “OUT” button for one second and release and repeat steps (c) & (d) until both LED lights are on.

Step 3:

Using the wall switch, extend the room all of the way out until it stops. Conduct the following inspections:

- Verify the room did full stroke and that the interior seals are evenly compressed.
- Verify the vertical wipe seals are in uniform contact with the side walls of the slide box.
- Verify the upper and lower wipe seals are in uniform contact with the floor and ceiling.
- Verify that all of the floor rollers are in constant contact with the slide box floor.
- Verify the lower wipe seal is of proper length and is clear of all of the rollers.
- Verify the exterior top wipe seal is overlapped and glued at each corner to the vertical wipe seal.




Adventurer LP

3303 West Washington Avenue
Yakima, Washington 98903
Phone: 509-895-7064 Fax: 509-895-7068
Email: amlrv@amlrv.com Website: www.amlrv.com

Step 4:

Homing the slide out control box after it has been in use:

- a) Locate the "mode button" on the slide out control box. This is located next to the red and green LED's. (This is accessed through the small opening in the face of the control box.)

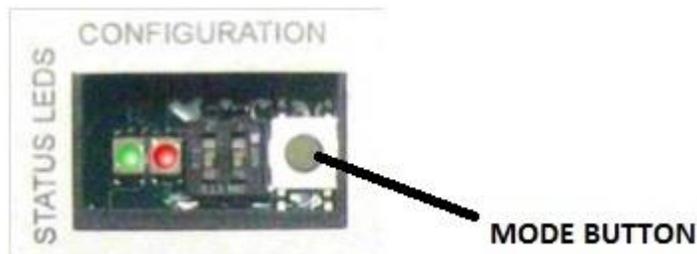

- b) The slide out control module must be placed into manual override mode to reset the settings in the module. This is done by quickly pushing the "mode button" six times, press a seventh time and hold it for approximately 5 seconds. The red and green LED's will begin to flash confirming manual mode. Release the "mode button". Let the slide out sit undisturbed for at least two minutes, this will reset the control box.
- c) Now that the control box has been reset, repeat steps 2 & 3 to set up the control box to the proper operational parameters.